


Instructions on Battery Replacement for the Ipico Lite Reader

1. Remove the eight Black Hex Cap Screws around the exterior of the Orange Carrying Case using a [5/32" or 4mm Allen Wrench](#).




2. Remove the four Silver Phillips Screws from the four corners of the Control Panel.

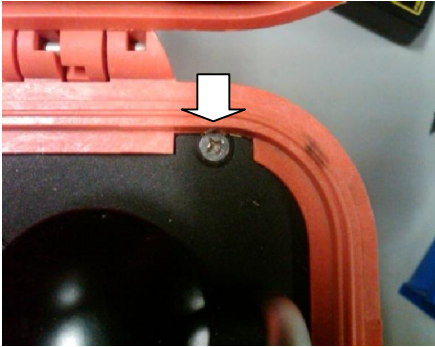


3. Pull up on the Silver Handles and each end of the Control Panel to remove the Chassis from the Orange Carrying Case. It is a tight fit so it may take some additional help.



- Once the Chassis is out of the Carry Case, you will notice at the bottom of the Chassis that the two batteries lay on their sides and are sandwiched between the Chassis itself and a metal plate. You will see a White Connector on the Motherboard that should now be disconnected to prevent accidental damage to the Motherboard during removal and replacement of the batteries.

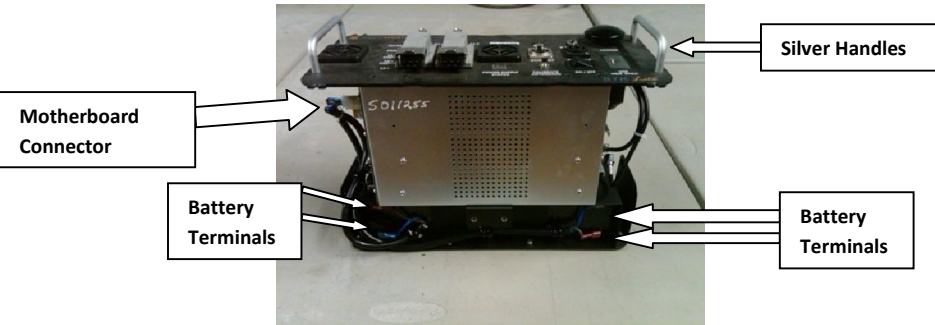

- You will need to disconnect the two Red (Positive) and two Blue (Negative) Spade Connectors from the batteries before proceeding.

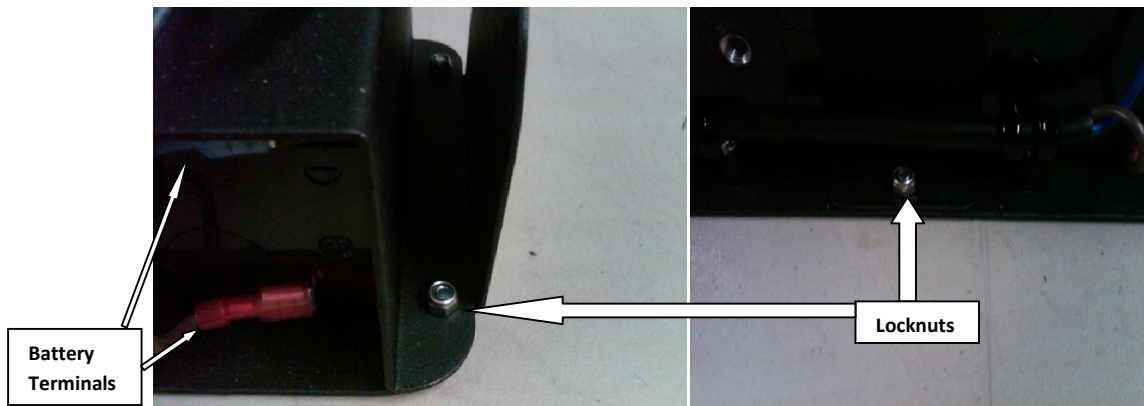

- Remove the eight Silver Locknuts with a [7mm Wrench or Socket](#) and then gently lift up on the Silver Handles on the Control Panel and separate the Bottom Plate and batteries from the Chassis.



- The batteries should lift out of the plate although they may be stuck slightly to the plate.



- The replacement batteries can be acquired through Batteries Plus, Interstate Battery and online. The original part number varies based on the manufacturer but the Batteries Plus Part Number is; [Werker#WKDC12-8NB](#). This number can be crossed to other manufacturers through other dealers or websites. Below is a picture of an original CSB Battery and its' part number.



- Install new batteries by reversing the above instructions and contact Ipico Support at support@ipicosports.com with any questions or problems.